


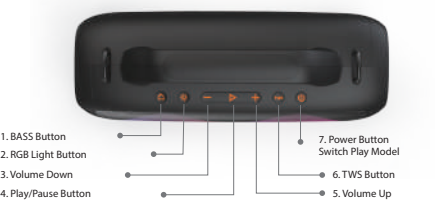
Lambo BoomBox Urus MM LB-BoomBox Nero
Nero Noctis
Instruction Manual
English

Packing List




- Lambo BoomBox Urus MM
- Type-C Cable
- Strap
- User Manual


Diagram



Charging




Powering On/Off

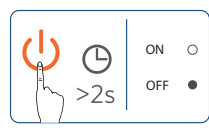


Press and hold for 2 seconds to power on/off
Click it once to change the model


Charging

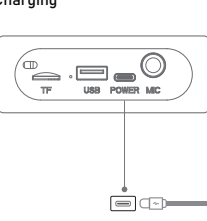


Wireless Disconnection

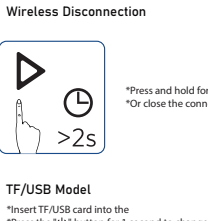


TF/USB Model

 


Hotkey




TWS Wireless Pairing



 
Alexa Connection




How To Change The RGB Light






Lambo BoomBox Urus MM LB-BoomBox Nero
Nero Noctis
Manual de instrucciones
Spanish

Lista de embalaje




- Lambo BoomBox Urus MM
- Cable tipo C
- Correa
- Manual de usuario

Diagrama

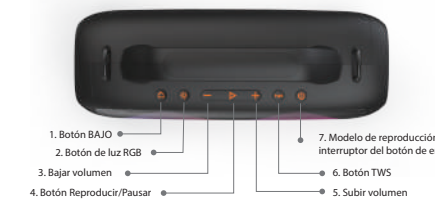


Encendido/apagado




Mantenga presionado durante 2 segundos para encender/apagar
Haga clic una vez para cambiar el modelo


cargando




Desconexión inalámbrica

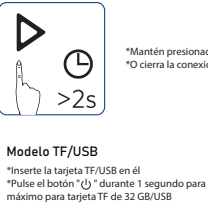


Modelo TF/USB

 


tecla de acceso rápido




Emparejamiento inalámbrico TWS



 
Conexión Alexa




Cómo cambiar la luz RGB

 




Lambo BoomBox Urus MM LB-BoomBox Nero
Nero Noctis
Manual de instruções
Portugese

Lista de embalagem




- Lambo BoomBox Urus MM
- Cabo tipo C
- Alça
- Manual do usuário

Diagrama

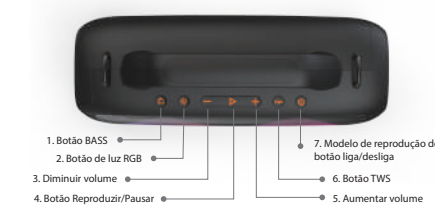


Ligar/desligar

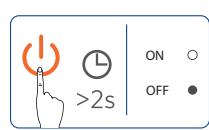


Pressione e segure por 2 segundos para ligar/desligar
Clique uma vez para alterar o modelo


Carregando




Desconexão sem fio

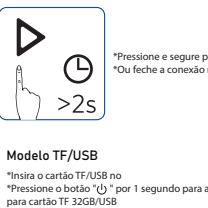


Modelo TF/USB

 


Tecla de atalho

 

Emparejamento sem fio TWS



 Conexão Alexa



Como mudar a luz RGB

